

## GF-RK

### Reinstallation Kit for GlassFix® Antennas Operating Below 500 MHz

The GF-RK GlassFix® reinstallation kit contains all new parts necessary to reinstall a GlassFix® antenna. The following tools are necessary:

- A knife with a long, bendable blade.
- A sharp razor blade with holder (or equivalent) for cleaning/ scraping.
- Acetone and a dry cloth.

#### NOTE

GF antennas are not suitable for car models with windows that have heat reflective coating.

### 1. DISMANTLING AN EXISTING INSTALLATION


- The external antenna mount and the internal matching unit are removed using a knife with a long, bendable blade. While bent, the knife blade is led in between the glass surface and the unit to be removed, and with slow, twisting movements the units can be eased off.
- The above process usually leaves a bit of silicone glue on the glass. These remnants are easily removed using a sharp razor blade, preferably on a holder.
- The old cover and mount are scrapped.
- Finish up by cleaning the glass surface with acetone.

### 2. REGENERATING THE GLASSFIX® ANTENNA

- Strip off the double adhesive tape remains on the matching unit. The old tape may stick very effectively to the printed circuit board surface, and the tape may have to be scraped off carefully with a knife.
- Clean the exposed surface with acetone and mount the new double-sided tape-pad from the "GF-RK" kit on the unit. Align the tape carefully while fixing it.

The antenna is now re-established and can be mounted following the normal GlassFix® mounting procedure.

COVER

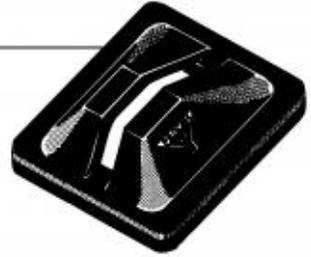

ANTENNA MOUNT



WINDOW CLEANER



GLUE



SPREADER



TAPE PAD FOR MATCHING UNIT



HEXAGON KEY



CABLE CLIPS (5 PCS)



### REINSTALLATION



## 1. BEFORE INSTALLATION

- When selecting mounting location take into consideration: positions of back view mirror, wiper blade paths and defogger wires (when mounting on rear window). The driver's view should not be obstructed.
- Max. allowed curvature of the glass surface on the mounting spot is 2 mm deflection per 100 mm length.
- Environmental- and car temperature must be above 15° C at installation, and surfaces to be glued must be dry and clean.

## 2. INSTALLATION:

## ORDERING DESIGNATION

TYPE NO.	PRODUCT NO.
GF-RK	

## TUNING INSTRUCTIONS

- Insert a forward/reflection-type wattmeter between the transmitter and the antenna.
- Key the transmitter and observe the forward and the reflected power.
- Adjust the tuning screw on the matching unit until minimum returned power is obtained.


## WARNING SAFETY PRECAUTIONS

Antennas mounted on the windscreen may cause relatively high field strengths in the passenger cabin and near the dashboard.

- To prevent health hazard due to RF radiation, persons must not be closer than 30 cm to the antenna whip (transmitter output power to the matching unit: 20 W). (DIN 57 848).
- The RF signals at the dashboard may cause interference in the car's electronic equipment such as broadcast radio, computer automatics, braking systems, electronic ignition, relays etc. Some cars are more susceptible to disturbances than others. It is the responsibility of the installer to carry out a thorough check of the proper functioning under any conditions of such circuits before finishing installation.

The enclosed silicone adhesive contains acetic acid and fungicides. Keep out of reach of children and dispose properly.

Procom A/S reserve the right to amend specifications without prior notice.

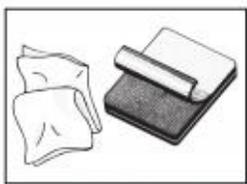

1. Clean both sides of the windscreen, where the antenna mount and the matching unit are to be fitted, and then remove the protective foil from the antenna mount.



2. Fit mount to screen and press firmly. Apply glue along the edge between mount and glass.




3. Apply glue to the cover.



4. Fit the cover and press down firmly. The antenna whip can now be fitted.



5. Remove the protective foil on the matching unit.

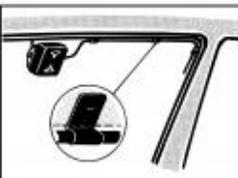

6. Fit matching unit by pressing it firmly into position. Secure cable using clips provided.

### 3. AFTER INSTALLATION

- Allow the silicone gluings to dry off 2 hours at a temperature above 15° C. To ensure full strength of the glue, it is recommended to keep the whip off the mount for 24 hours.



PROCOM A/S reserve the right to amend specifications without prior notice